




D|air Racing Drivers Setup

Connect the D|air Racing to the pc using the USB Cable supplied with the suit.

If Drivers are not detected correctly follow these steps:


Open Windows Device Manager

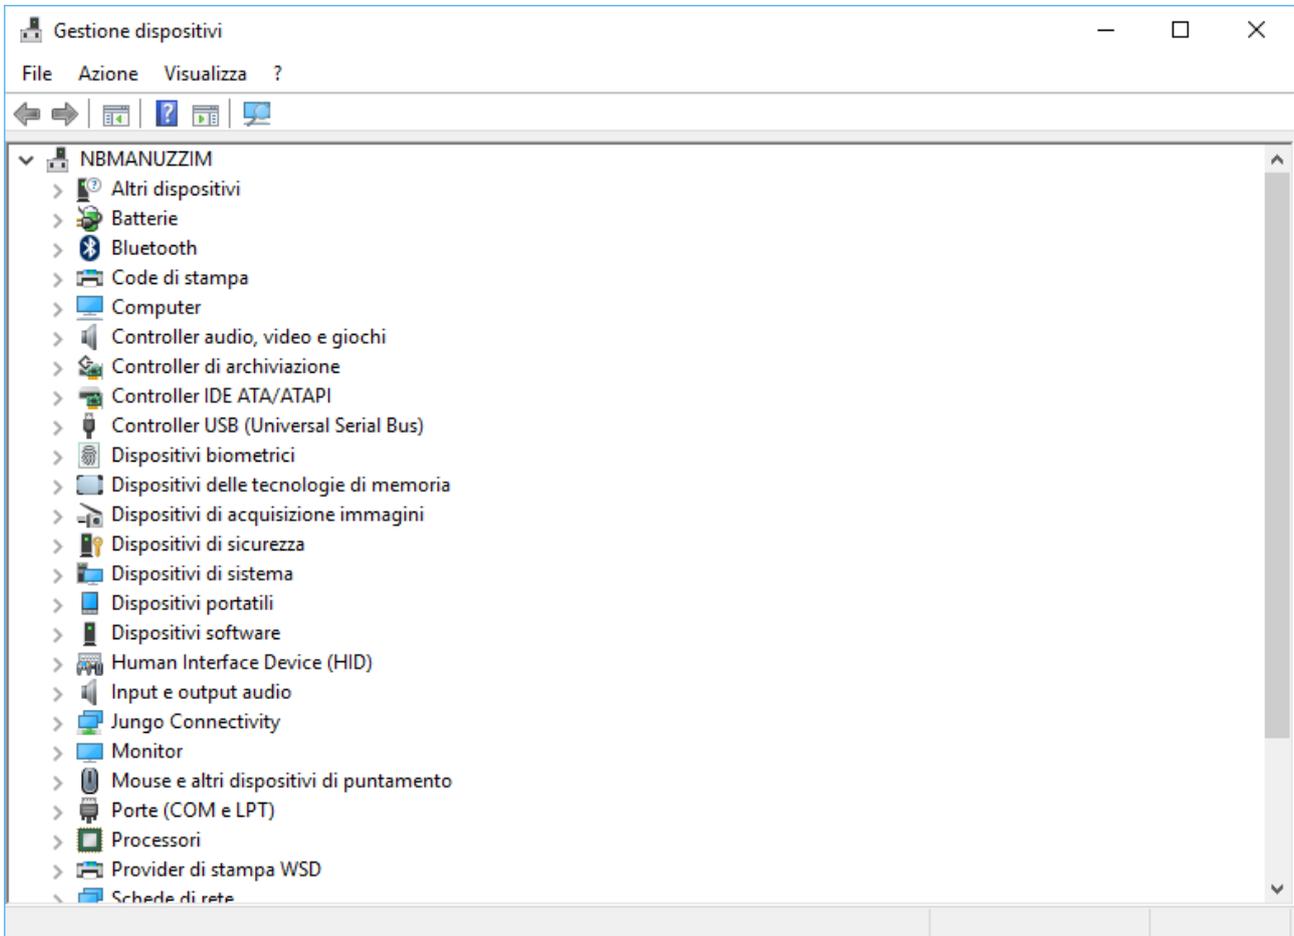

Find Ports (COM & LPT)




Select the latest COM Port Connected (it's better to remove all other usb devices like printers).

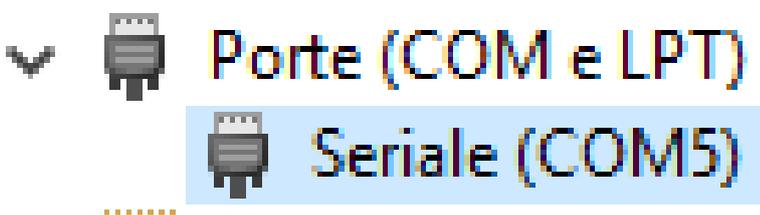


Double click on the Icon, a new window should appear:



D|air Racing Drivers Setup

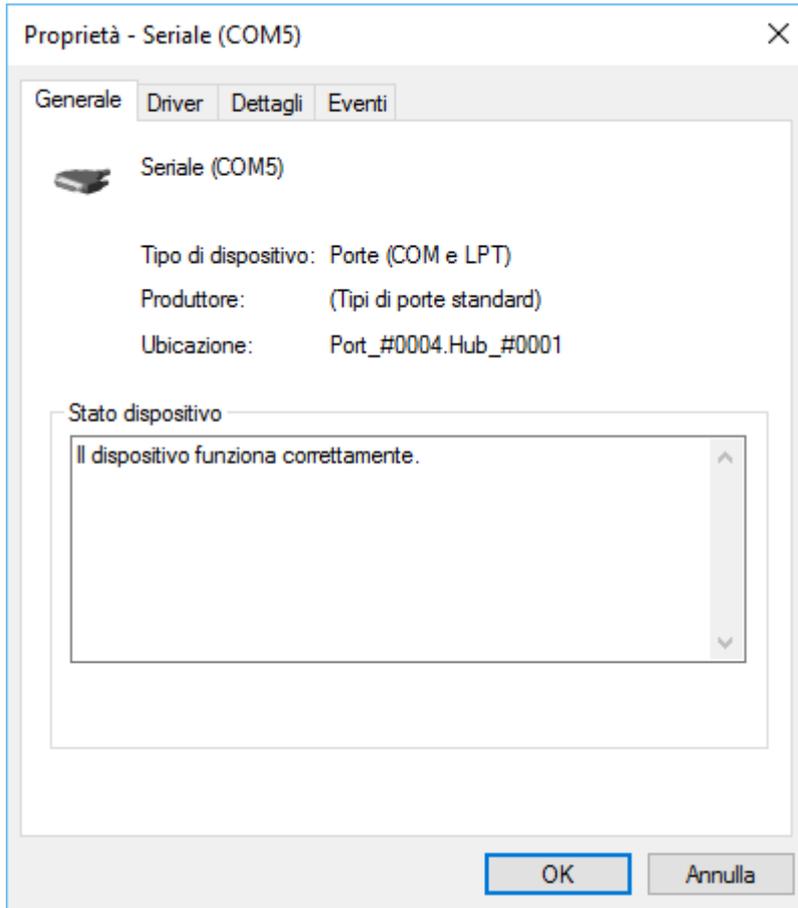


Click on Driver:

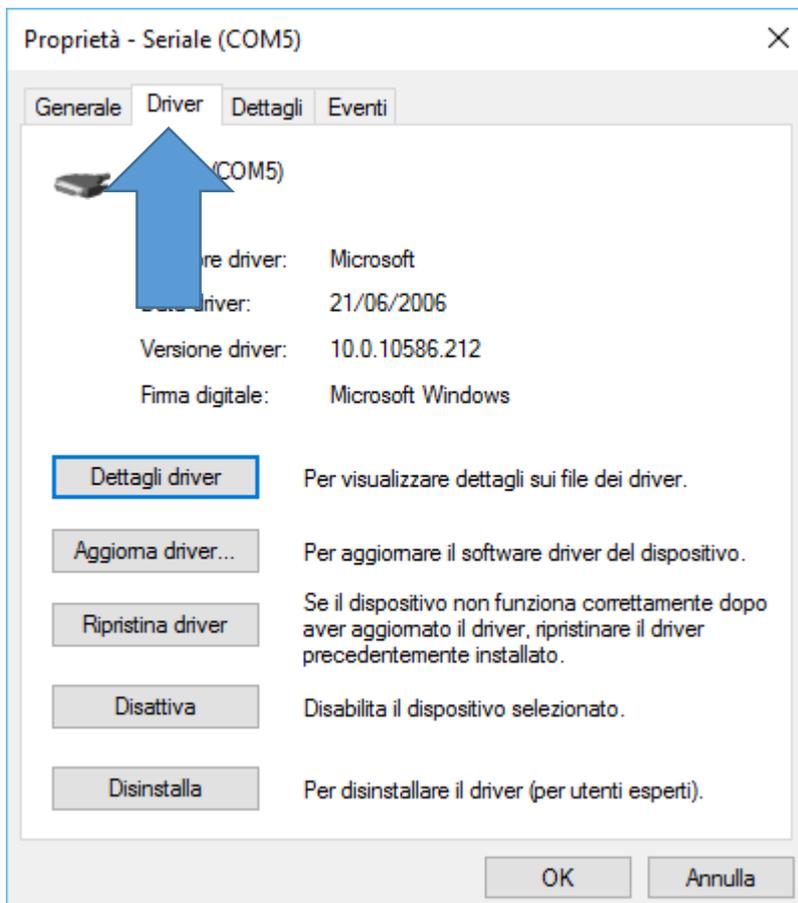




D|air Racing Drivers Setup

Click on "Update Driver":

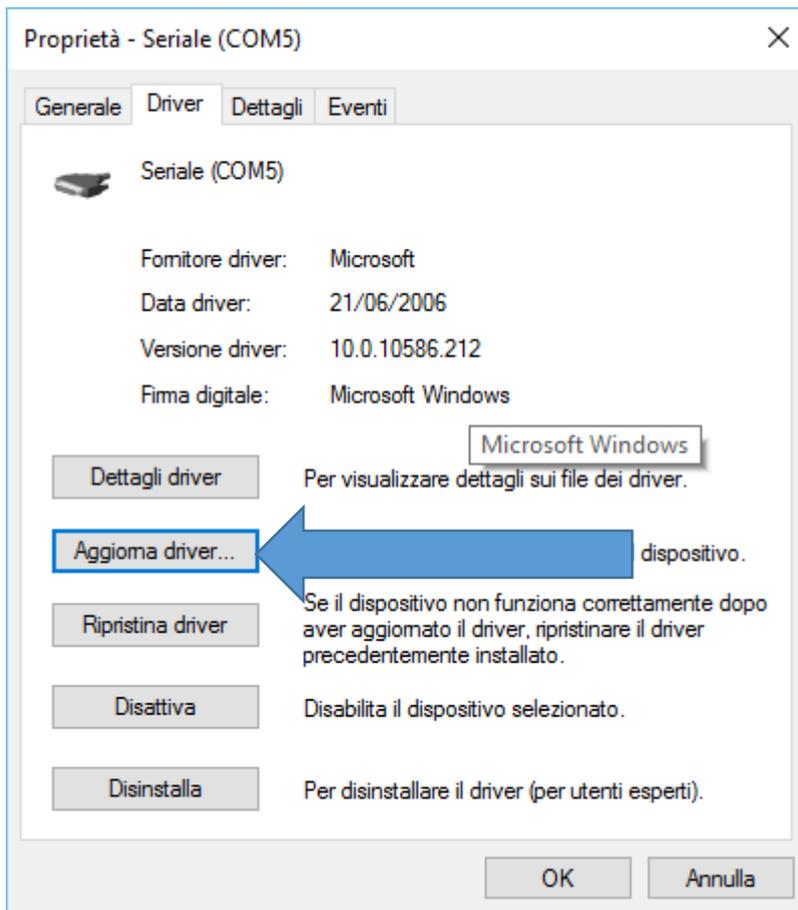


A new window should appear:

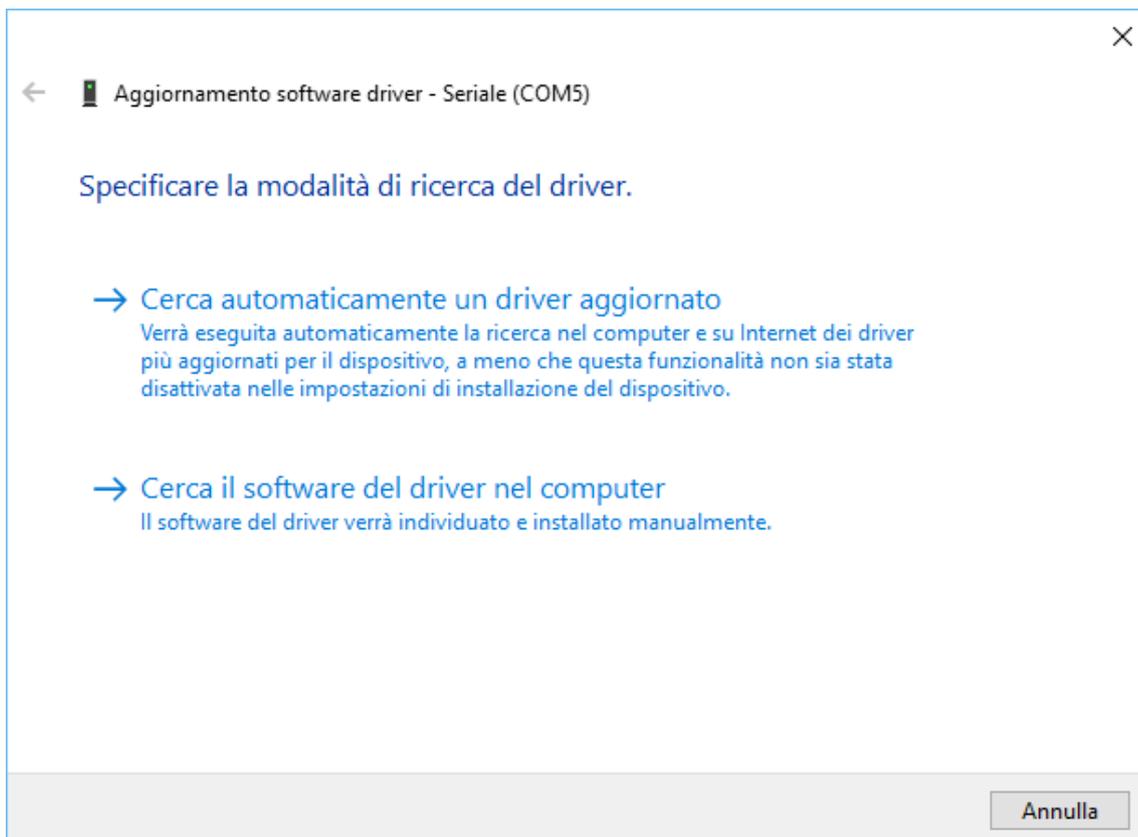



D|air Racing Drivers Setup

Now click on "Browse my computer for Driver Software (2nd option):

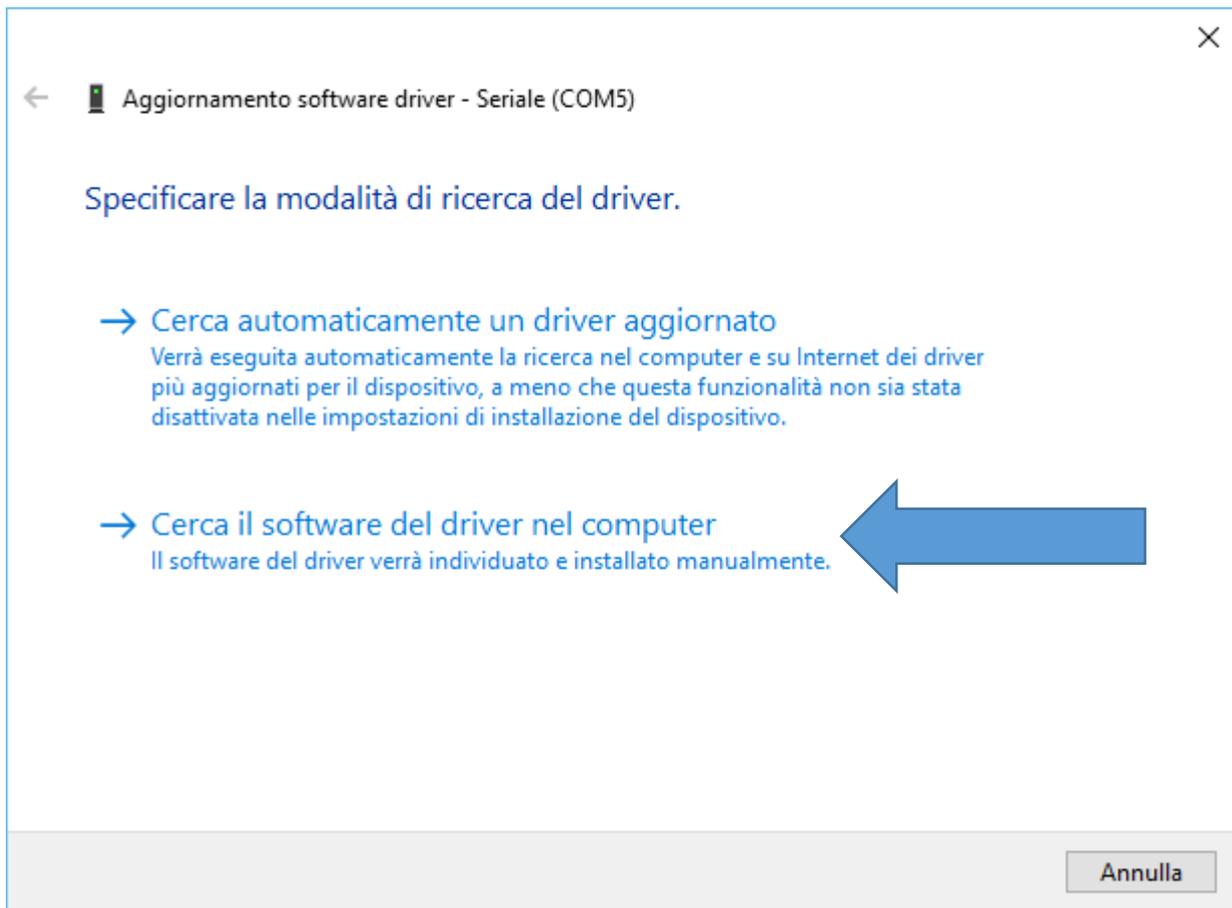




D|air Racing Drivers Setup

Select the correct driver folder:

C:\Program Files (x86)\RaceKitDAir_14\Drivers

Remember to select "Include Subfolder":

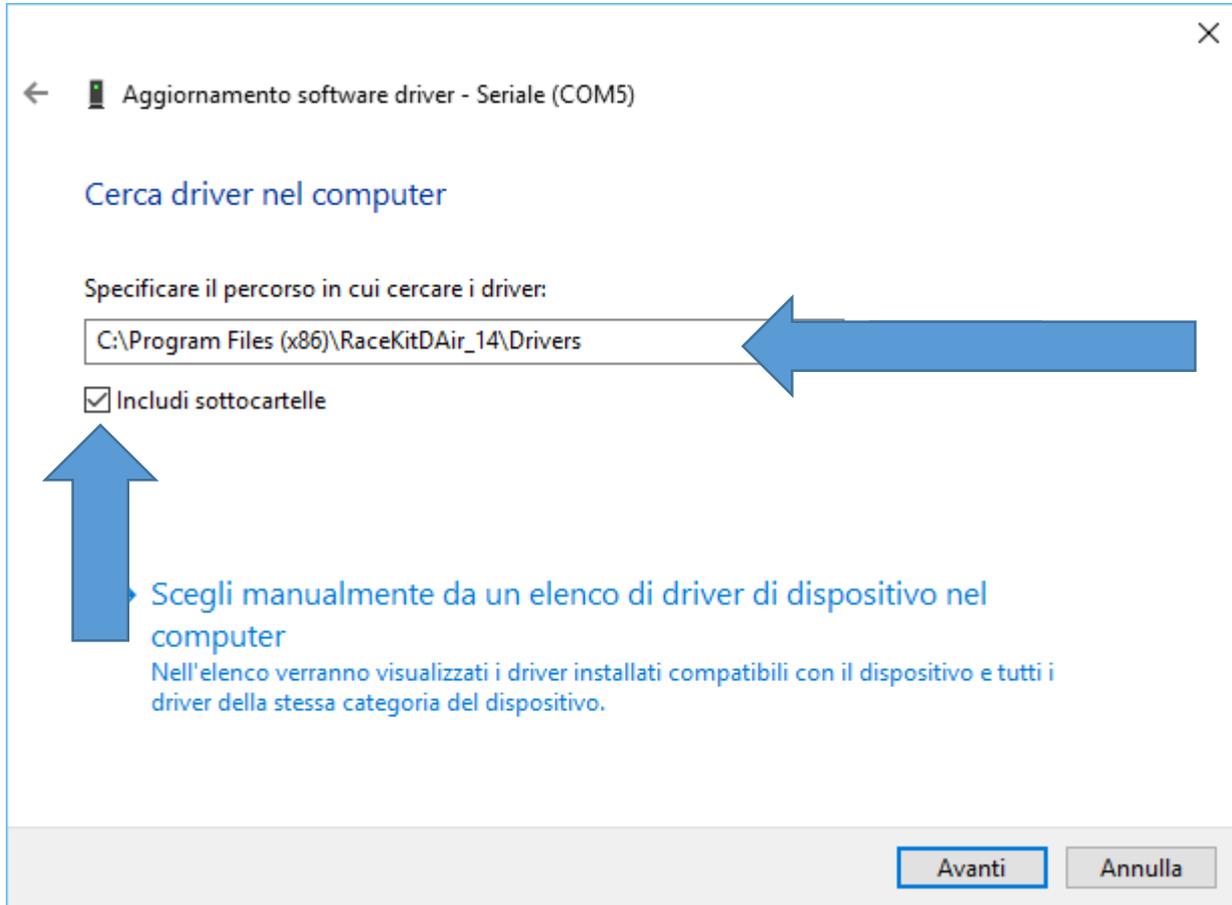


If Prompted, Click on "Install Driver software" on the Windows Safety Popup Window






DAir Racing Drivers Setup

The Software Driver now should be installed correctly:

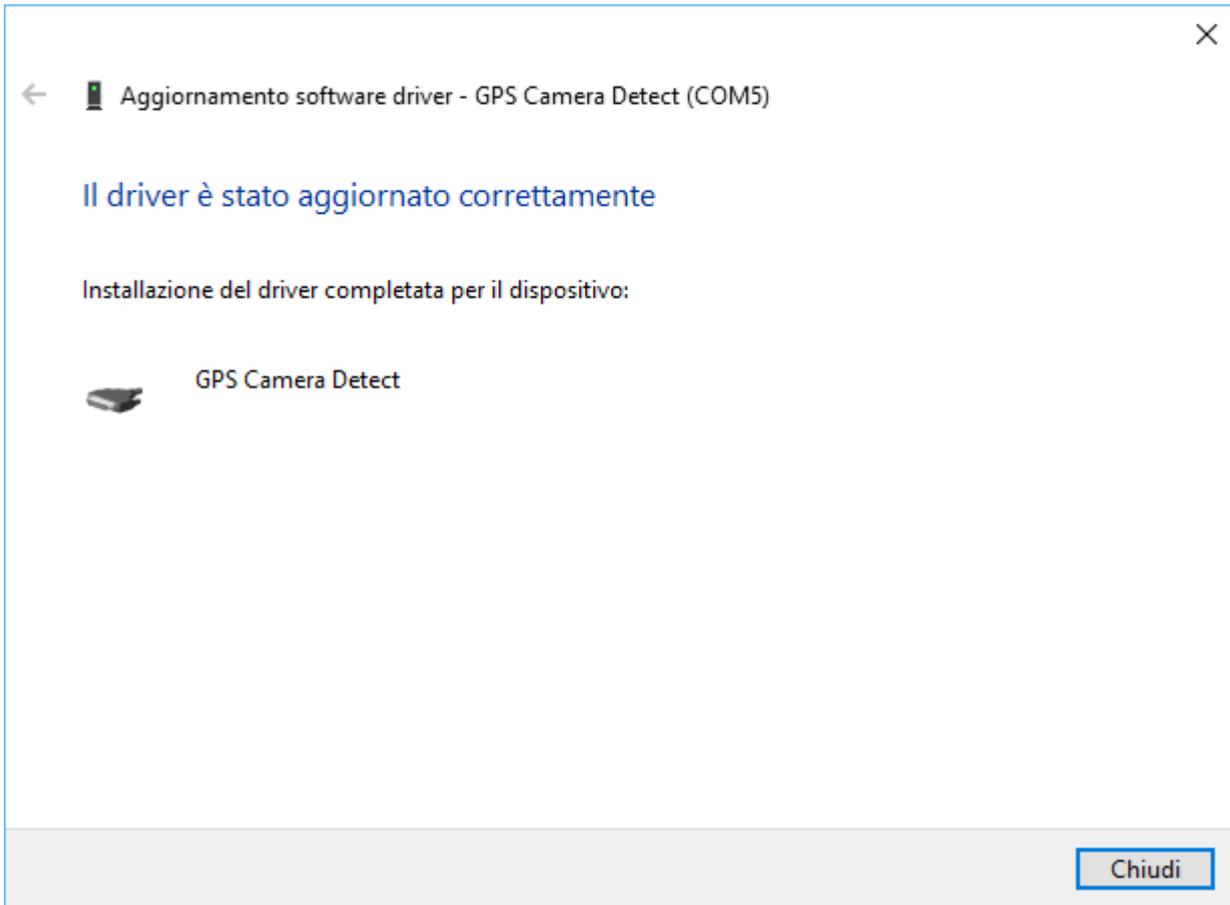


Open WinARace KIT DAir 14 in order to test the drivers:

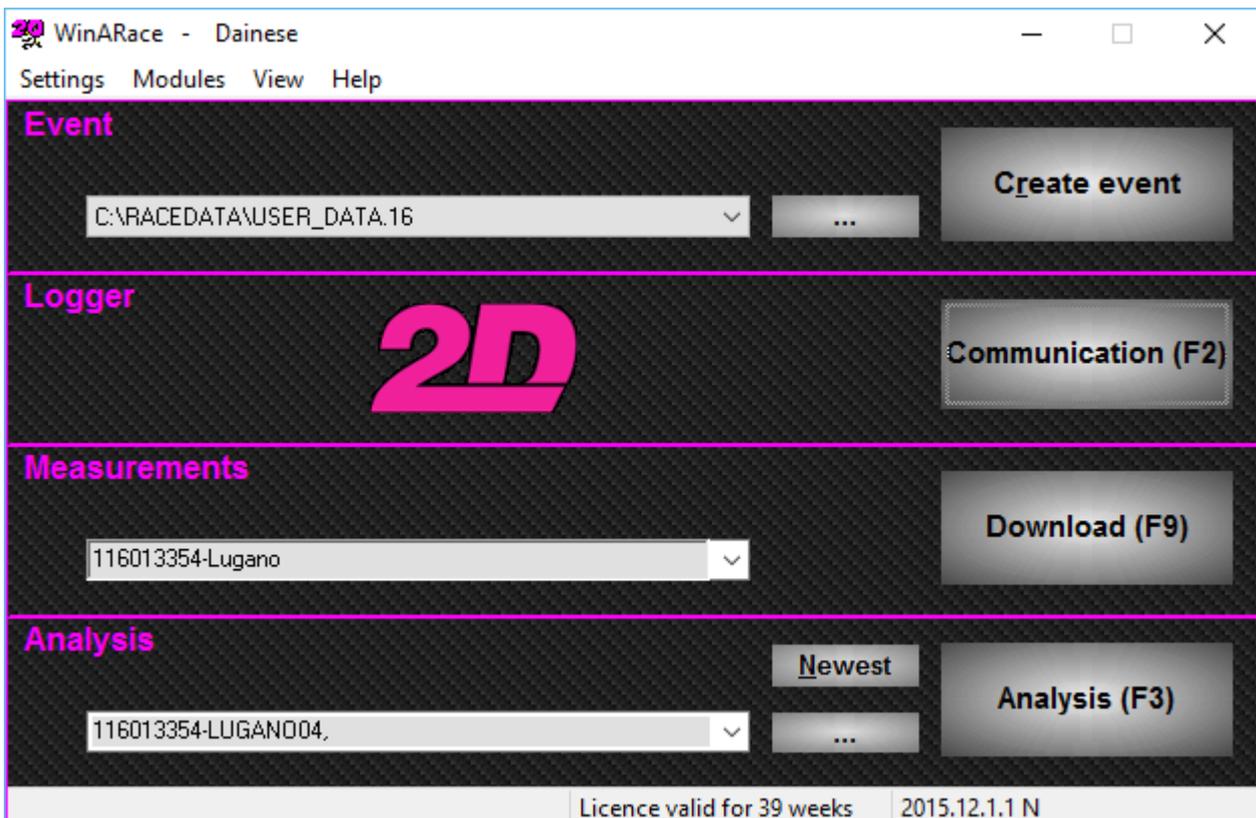



D|air Racing Drivers Setup

Lick On Communication (F2):

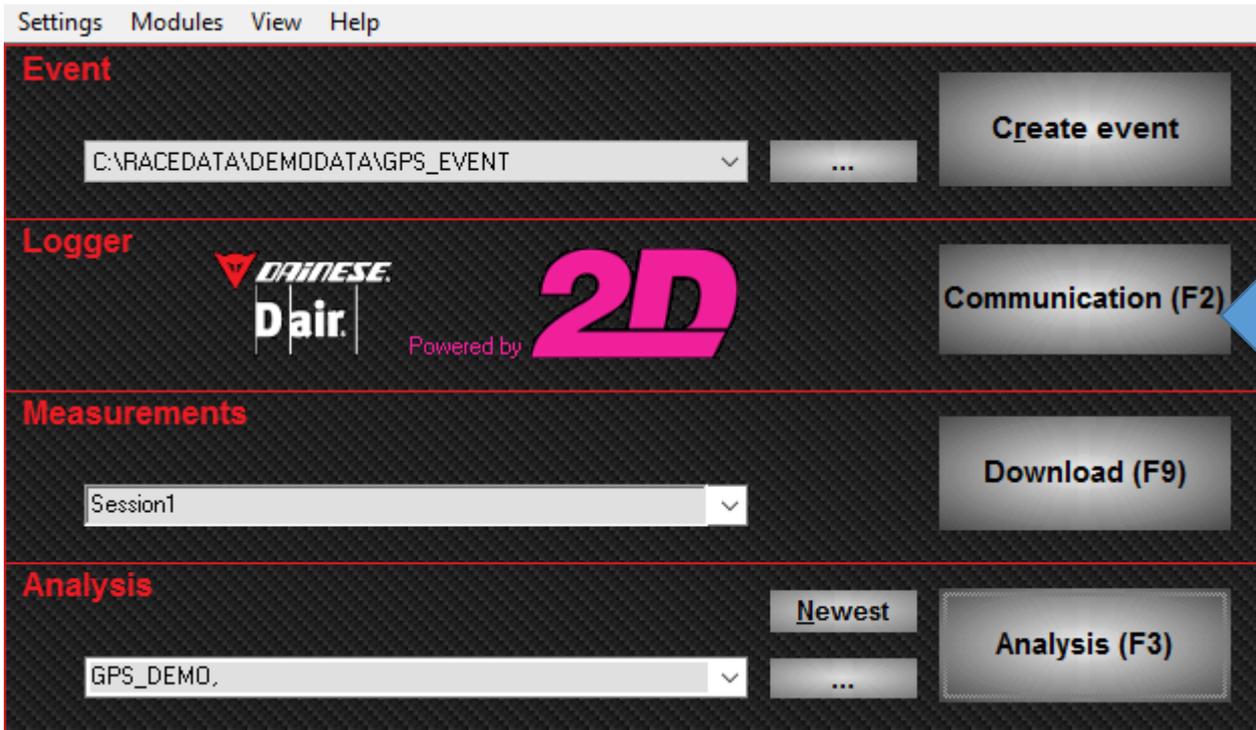

A similar Window should appear:





D|air Racing Drivers Setup


If not, click on the 2nd button from the left to start Logger search:



File Logger



On the next popup window select "Scan all COM-ports for logging device" and click OK:

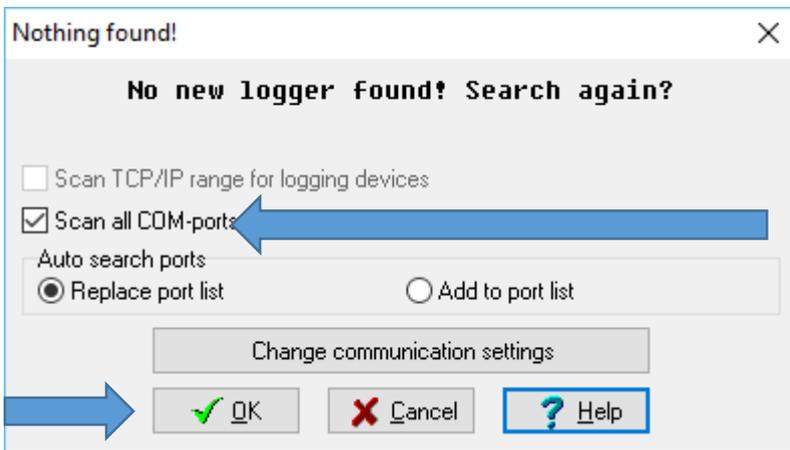

The communication should start correctly:

